

SET UP

INSTRUCTION

ROLL UP COMPACT




Take the parts out of the bag.



Unfold the stabilising foot and place the cassette on a flat surface.



Unfold the 2-part supporting rod. Make sure that the parts click in each other. $\,$

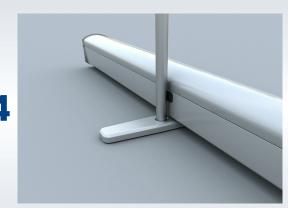

Place the supporting rod into the hole of the stabilising foot.

Pull up the graphic panel and attach the top profile to the top fastener of the supporting rod.



Loosen the lock lever on the telescopic rod.



Chose desired height and seceure with the lock lever.



Verify that the system is even. READY!