
Centro 2 Assembly Instructions **Straight and Curved (no spacer bars)**







connector bar grooves shown in stage 3.

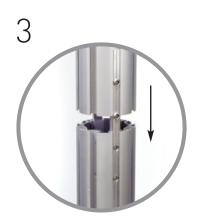


Join posts and tighten the grub screws to make assembly secure. Repeat for other base post.



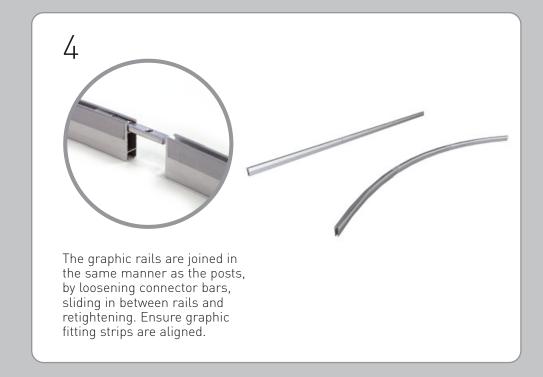

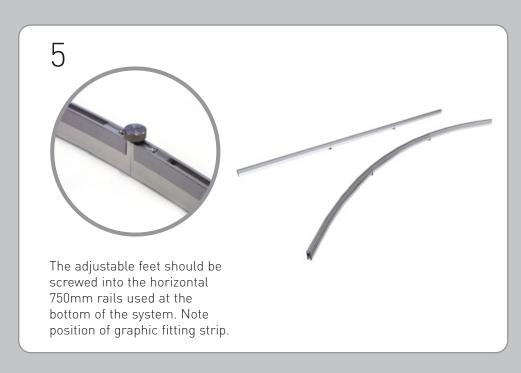

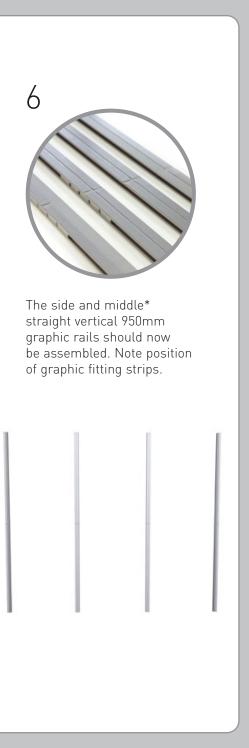





Connect the bottom horizontal rail to the two posts and tighten grub screws as before. Leave top rail until all verticals are in place. They will balance.






Connect side vertical rails to the bottom horizontal rail. The side vertical rails have one run of tape on them. Strip should be nearest the post when viewed from the front.



Connect middle rail(s)* to the bottom rail and tighten grub screws. The middle rails have ta double graphic fitting strip on them. They will balance.

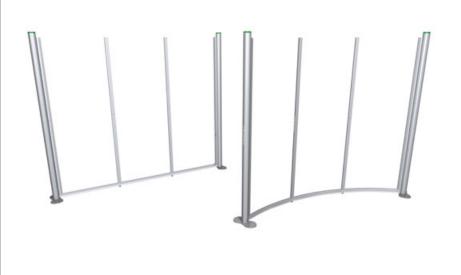





Affix graphics to the fitting strip starting from the top and side, working across the completed system.

