

# Centro 1 Assembly Instructions



1



Stand base on the ground.  
Loosen grub screws and slide  
both connector bars half way  
out of groove and retighten.  
Repeat for other base post.

**Note:** Base plates  
pre-assembled on kits  
supplied in carry bag only.




2



The upper 8-way post end  
cap has two notches which  
should align with the  
connector bar grooves  
shown in stage 1.

3

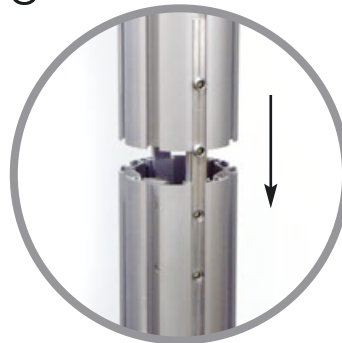

Join posts and tighten  
the grub screws to  
make assembly secure.  
Repeat for other base posts.




4



Assemble the horizontal rails in the same manner as the posts by loosening connector bars, sliding in between rails and retightening.



5

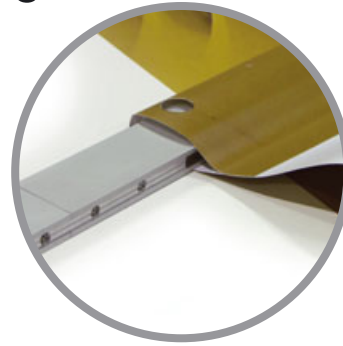


Slide one set of horizontals into the top pocket of the graphic ensuring that the connector bars are on the underside of the profiles.



6




Connect the top horizontal rail to the two posts and tighten grub screws to secure in place.

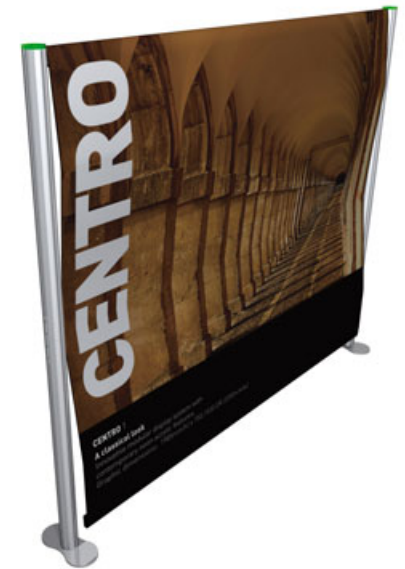

7



Slide the other set of horizontals into the bottom pocket of the graphic ensuring that the connector bars are on the underside of the profiles.

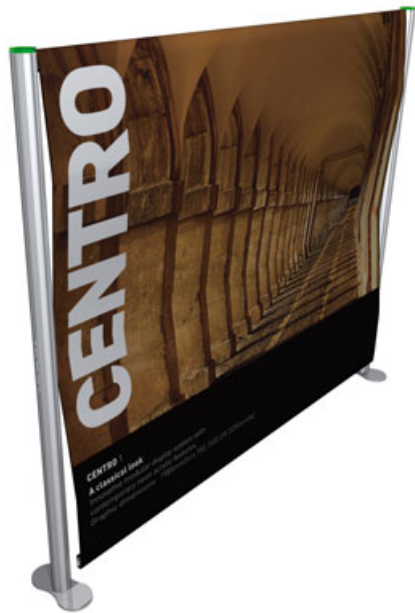

8



Tension graphic by pulling down the bottom horizontal rail and secure to both posts by tightening grub screws.

